

Website: LegacyLLC.com General Inquiries: contact@legacyllc.com Orders: orders@legacyllc.com Main Office: 415 Concord Avenue Bronx, NY10455 Phone: (718)292-5333 Fax: (888)383-3330

Adjustable - Aluminum - Bronze - Carpet Saddles - Half Saddles -Interlocking - Expansion Joint - Solid Rubber - Thermal Break - Stainless Steel - Rubber Grip - Rabbeted - Ramps - Diamond Plate

1. Measure


Measure the door sill (frame width at bottom) and cut the threshold to extend the full width of the opening.



2. Cut

Notch the threshold sides if necessary to accommodate the side jamb stops. Shim the saddle if needed and make sure that it is completely level.



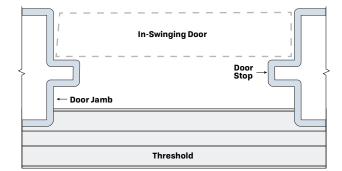

3. Secure

Fasten the threshold to the sill with screws provided.



4. Examine

Operate the door several times to ensure the part is properly adjusted so as not to inhibit the door from self-closing and latching.

5. Caulk

Caulk around base of saddle for increased moisture control.

