



LEGACY
MANUFACTURING



EMAIL

contact@legacyllc.com



PHONE

Local: +1 (718) 292-5333

Toll Free: +1 (888) 383-3330



WEBSITE


LegacyLLC.com



ADDRESS


415 Concord Avenue,
Bronx, NY 10455

Installation Instructions
RAIN DRIPS

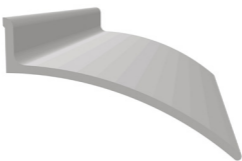

#5241

- 1.** Measure door sill and cut the rain drip length to fit.
- 2.** Mark hole locations for screws. Drill holes for screws using #30 drill bit.
- 3.** Fasten screws.
- 4.** Caulk the top edge of rain drip to prevent water penetration.

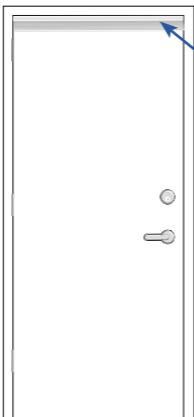

Installation on exterior face of frame header.