


Installation Instructions

1. Position the mounting channels in the desired location with larger holes facing exterior.
2. With channels vertically aligned, mark screw holes.
3. Drill pilot holes for screws using $\frac{9}{64}$ " drill bit.
4. Install channels with screws provided.
5. Caulk bottom outer edges of channels to the floor surface.
6. Ensure that the bottom is level and completely cleaned of all debris.
7. With label facing out, insert the bottom of plate into channels.
8. Apply force to the plate to compress rubber to the surface of the floor. Two people may be needed to apply even pressure on both ends.
9. Tighten red screws. Make sure that there is no visible light coming through between the floor and rubber.

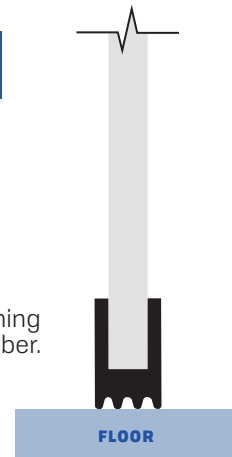

No Light should be visible coming between the floor and rubber.





Operating Instructions

Inspect channels to ensure proper working condition.

Inserting Shield: With label facing out, insert the bottom of plate into channels. Lower the shield until there is a firm and even connection with the sill. Tighten the tension screws.

Removing Shield: Loosen the tension screws so the shield can be properly removed. Pull straight up on the plate to remove from channel.

Storing Shield: Store the shield indoors with no weight against the gasket.

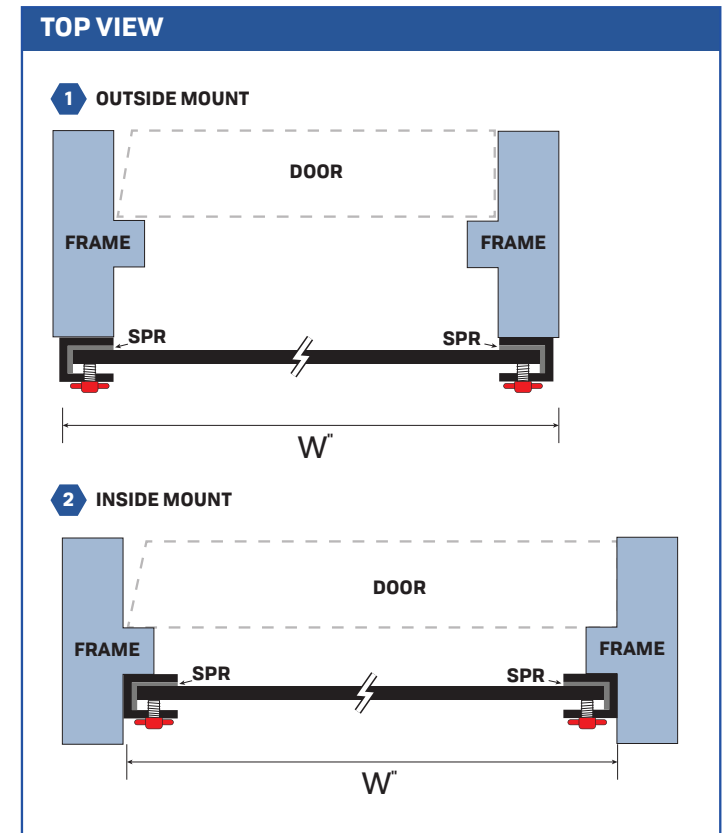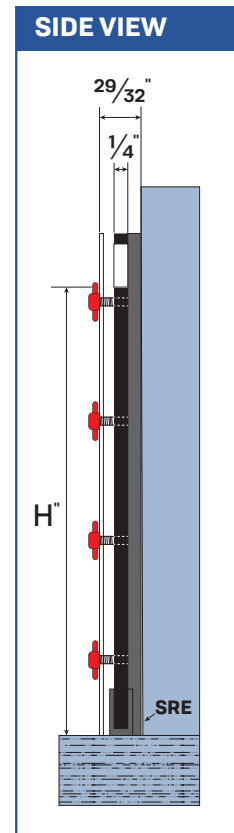

ABBREVIATIONS

SPR - Sponge Rubber Extrusion **SRE** - Solid Rubber Extrusion