

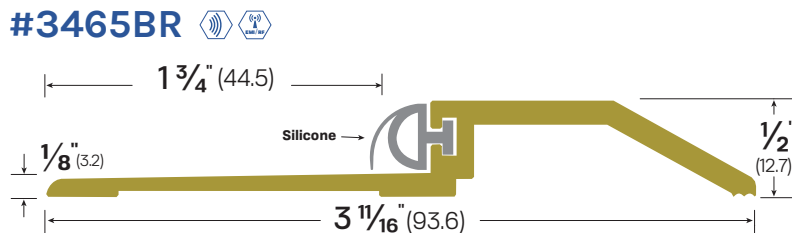
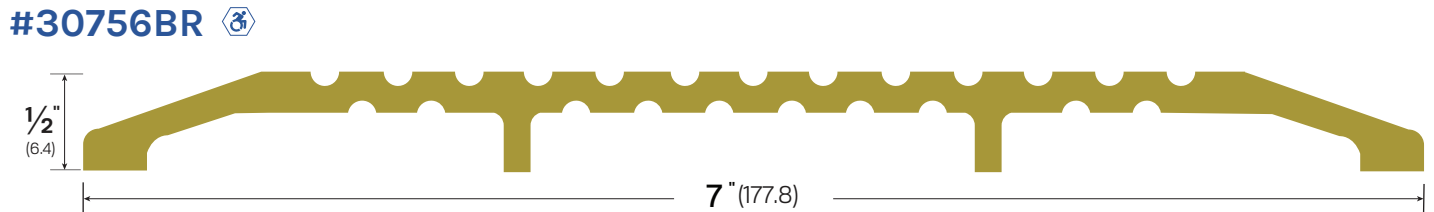
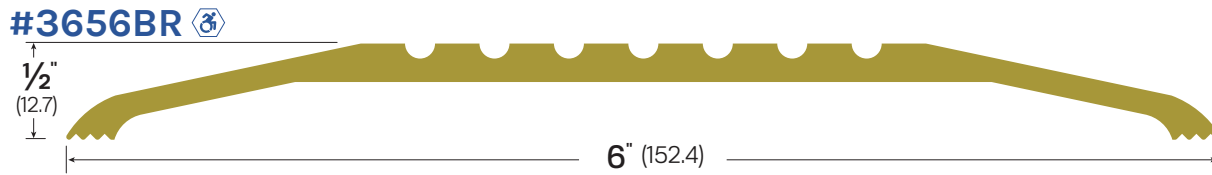
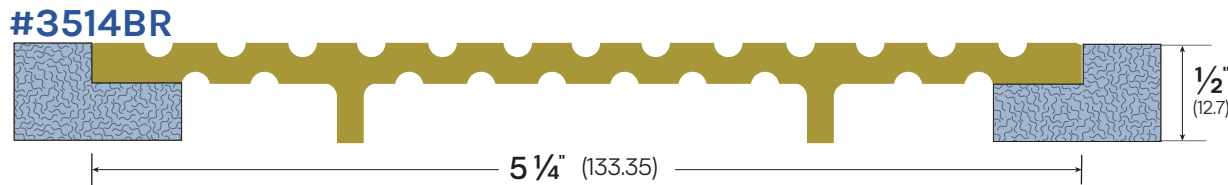
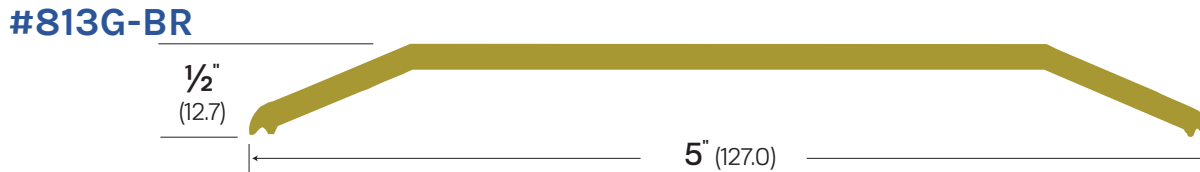
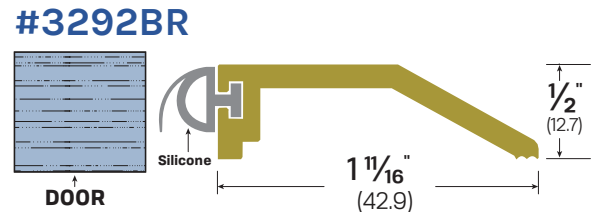


#30756BR

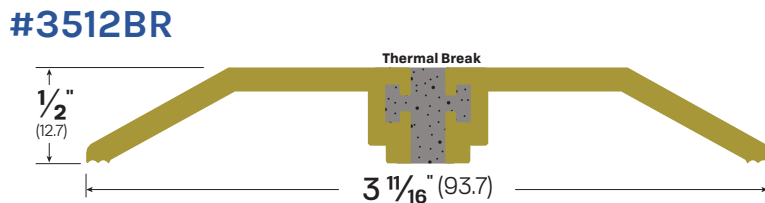

**OPTIONS:** EMI/RFI - Electromagnetic/Radio Frequency Interference

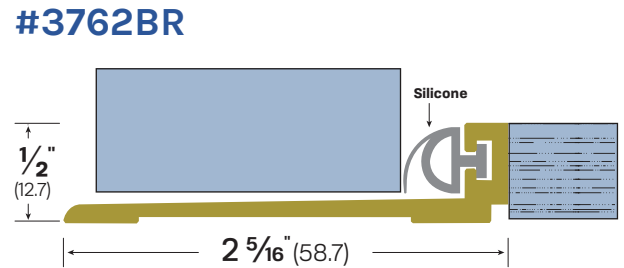

LEGACY	3545BR	3656BR	3514BR	30756BR	3465BR	3762BR	3512BR	3292BR
NGP	513BR	426B	-	427BR	-	-	-	-
PEMKO	271B	172B	-	176B	-	-	-	-
ZERO	545B	656B	-	657B	564B	-	-	-

**FINISHES:** MA, BR  
**OPTIONS:** ACF, EPX, FL, LA, PEPX, RUB  
**NOTES:** Flathead Zinc-plated screws - #10 x 1-1/2"

Thresholds  
Saddles