


Door Sweeps

### #5241

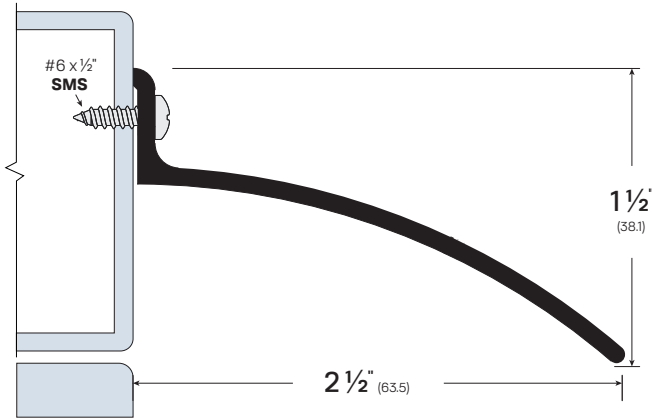

**FINISHES:** MA, MB, WP, SS


**OPTIONS:** SF - Security Fasteners

**NOTES:**

- Top of door rain drip
- Order length should be specified a minimum of 4" longer than door width.

LEGACY	NGP	PEMKO	ZERO
5241	16	346C	142AA

### #77918

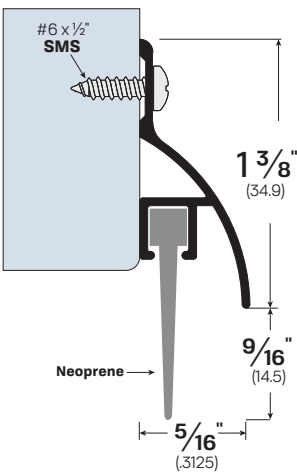


**FINISHES:** CA, BK, WP

**OPTIONS:** SF - Security Fasteners

LEGACY	NGP	PEMKO	ZERO
77918	101V	345AV	8197AA

### #78918

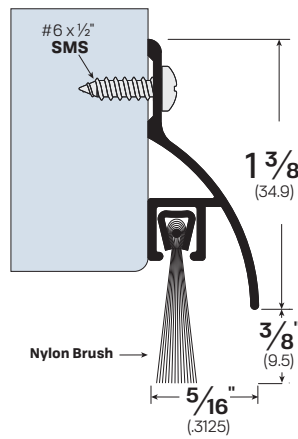


**FINISHES:** CA, BK, WP

**OPTIONS:** SF - Security Fasteners

LEGACY	NGP	PEMKO	ZERO
78918	C627	3452ANB	8198AA

### #711

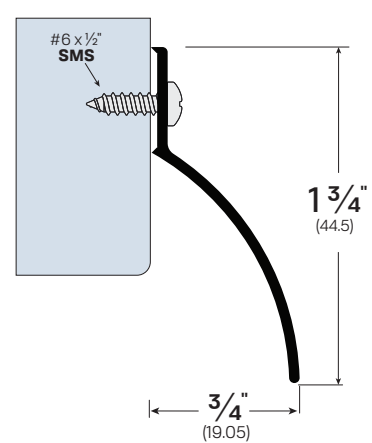


**FINISHES:** CA, MB, WP

**OPTIONS:** SF - Security Fasteners

LEGACY	NGP	PEMKO	ZERO
711	17	345C	11A

## For Overhead Doors


### #7254MA

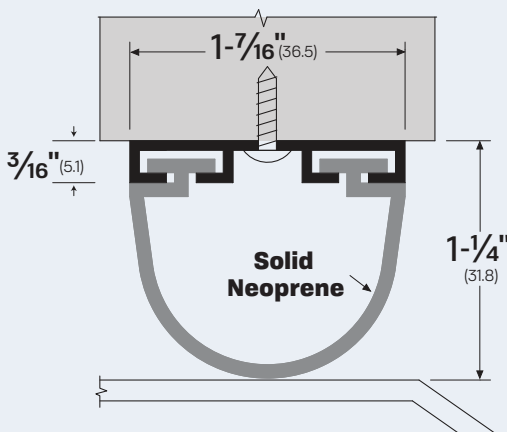

**FINISHES:** MA

LEGACY	NGP	PEMKO	ZERO
7254MA	-	-	452A


### #727MA

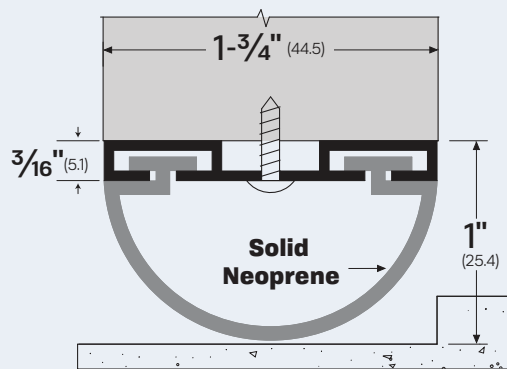

**FINISHES:** MA

LEGACY	NGP	PEMKO	ZERO
727MA	-	-	72A

### #725MA

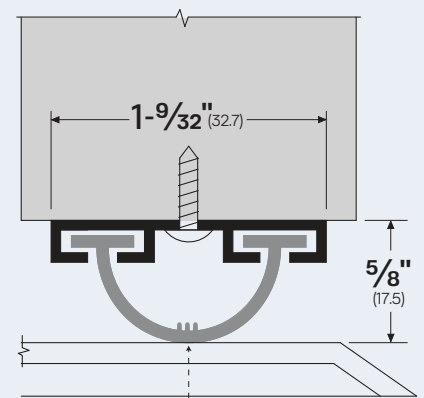

**FINISHES:** MA

LEGACY	NGP	PEMKO	ZERO
725MA	-	-	52A